



**FULL DC INVERTER SYSTEMS  
USER AND INSTALLATION MANUAL**

SDV6-CLOUD

COMMERCIAL AIR CONDITIONERS SDV6

# CONTENTS

---

## 1 Safety Precautions

- 1.1 Icon description ..... 02

## 2 Operation Instructions

- 2.1 Gateway Hardware ..... 04
- 2.2 Gateway Functions ..... 05

## 3 Installation Instructions

- 3.1 Product Introduction ..... 08
  - 3.2 Product Dimensions ..... 08
  - 3.3 Installation Accessories ..... 09
  - 3.4 Installation Method ..... 09
-

# 1 Safety Precautions


The Operation and Installation Manual of this product describes how to properly handle the product, prevent harm to others and prevent property losses, as well as how to use the product correctly and safely. Read the following carefully, make sure you understand the content (symbols and marks), and observe the precautions below.


## CAUTION

Read the safety warnings carefully prior to installation.

Be sure to observe the important safety precautions provided below.





Meanings of labels:

 **Warning** Improper handling may lead to personal injury or material loss.

 **Caution** Indicates that the operations will be affected due to ignoring a precaution.

After the installation is completed, confirm that no errors occur during the trial run, and hand over the manual to the customer for safekeeping.

## 1.1 Icon description

Icon	Name	
	Prohibited. Information about what is specifically prohibited is provided using graphs or texts in the icon or nearby.	
	Mandatory. Specific mandatory content is provided using graphs or texts in the icon or nearby.	
 Warning	Commissioned Installation	Ask your local dealer or professionals to install the product. Installation personnel must have relevant professional knowledge. When installation is performed by non-professionals, false operations may lead to a fire, electric shock, or injury.
 Warning of Use	Prohibited	Do not use combustible paints to spray directly on the data converter as this may cause a fire.
	Prohibited	Do not handle the product with wet hands, and do not let water seep into the device, as this will cause electric shock.

 **WARNING**

This unit must be installed by professional technicians. Users are not allowed to install the unit themselves; otherwise, it may cause harm to you or others or damage the controller.

Other electrical wiring work must be carried out by a professional technician according to the circuit diagram. All wiring work must comply with electrical safety specifications.

It is forbidden to modify the use and function of the product without authorization.

---

 **CAUTION**

Do not install the product in a location where flammable gas can easily leak. Any leakage within the vicinity of the device may cause a fire.

The wiring must be compatible with controller current.

Be sure to check the wiring before powering on, because it is prohibited to install the machine while the power is on.

In the event of any malfunction, please contact a professional technician. DO NOT disassemble or repair the unit without authorization.

This equipment is not suitable for places where children gather.


# 2 Operation Instructions

## 2.1 Gateway Hardware

SDV6-CLOUD Gateway [hereinafter referred to as the "Gateway"] is used together with " CloudService" to upload VRF unit data to the cloud server through the Gateway.

The model adapted are SDV6 ODU + 3rd generation IDU or SDV6 ODU + SDV6 IDU.

The Gateway supports one RS-485 bus and is capable of taking in 8 refrigerant systems (the maximum IDU quantity is 64); Supports 1 DI port which is defined as an emergency stop interface; Supports 1 LAN port used for Web page configuration.

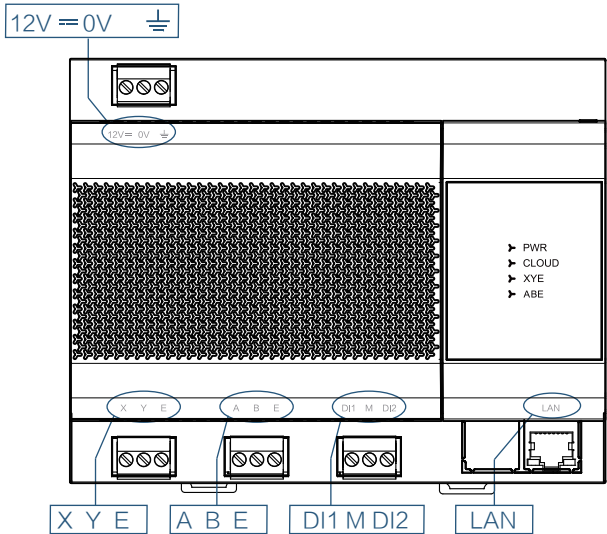

Port	Function
12V 0V	12 V DC power supply
X Y E	Connect the ODU XYE port (*1) and support 8 refrigerant systems (up to 64 IDUs). Multiple refrigerant system access gateways (*2), with the X/Y/E ports on the ODU master unit of each refrigerant system connected to the X/Y/E ports of the Gateway in serial.
A B E	Reserved
D I1 M DI2	Dry contact for short circuit connection of DI1 and M when the Gateway will start emergency shutdown logic. * This function will release the startup lock of the IDU. The emergency stop function is described in detail in the following sections.
LAN	Data are uploaded to the cloud server over the LAN.

\*1: The X port of the Gateway is connected to the X port of the ODU, and the Y port of the Gateway is connected to the Y port of the ODU.

\*2: When multiple refrigerant systems are connected, they need to use different addresses.

LED	Function
PWR	When the power supply is working normally, the power supply indicator PWR remains illuminated. Note: When the power supply indicator flashes, the power supply is abnormal.
CLOUD	Indicate whether the connection to the cloud server is successful: remains on when the connection is successful; turns off when the connection fails.
XYE	When the VRF unit and IDU can communicate normally, the light flashes once each time normal data are received.
A B E	Reserved

Operating ambient temperature	-10°C to +50°C
Operating ambient humidity	RH25%-RH90%

## 2.2 Gateway Functions

### 2.2.1 Gateway Web

Gateway's factory IP address is 192.168.1.200. Enter `http://Gateway IP` on the browser to access the built-in Web page of the Gateway. The PC needs to be in the same network segment as the Gateway.

In the address bar of the Chrome browser (\*3), enter `http://192.168.1.200`. The Web page of the Gateway is shown in the figure below:

\*3: Other browsers may be incompatible, preventing the Web function from working properly.

The screenshot displays the 'Cloud Gateway' web interface with a language selector for '中文 | English'. The 'Settings' tab is active, and the 'Firmware' sub-tab is selected. The interface is organized into three sections: 'Network Settings', 'Server Settings', and 'gateway\_settings'. In the 'Network Settings' section, the IP address is 192.168.1.200, the Mask is 255.255.255.0, and the Gateway is 192.168.1.1. The DHCP checkbox is unchecked. In the 'Server Settings' section, the Server IP address is mqtt-report-us.mideaibp.com and the Server Port is 8883. In the 'gateway\_settings' section, the version is 1.0.3 [Jul 8 2022] and the SN is 0000CC316000K86EB022841007158BGH. A 'Save' button is located at the bottom left of the settings area.

### 2.2.1.1 Settings

The parameters are described as follows:


Parameter page		Description
Network Settings	IP address	IP address of the gateway with factory settings 192.168.1.200
	Mask	Subnet mask with factory settings 255.255.255.0
	Gateway	Default gateway, factory settings 192.168.1.1
	DHCP	If it is checked, the DHCP function is enabled. This function is disabled on factory settings.
Server Settings	Server IP address	Server address, not changeable
	Server Port	Service port, not changeable
gateway_settings	version	Software version of gateway firmware
	SN	SN of gateway

After modifying parameters, click "Save" to automatically restart the gateway.


### 2.2.1.2. Firmware

Upgrade Gateway firmware: click "UpLoad" and select the correct firmware.

The firmware is successfully imported when the progress bar displays 100%. The gateway automatically restarts and updates the firmware.

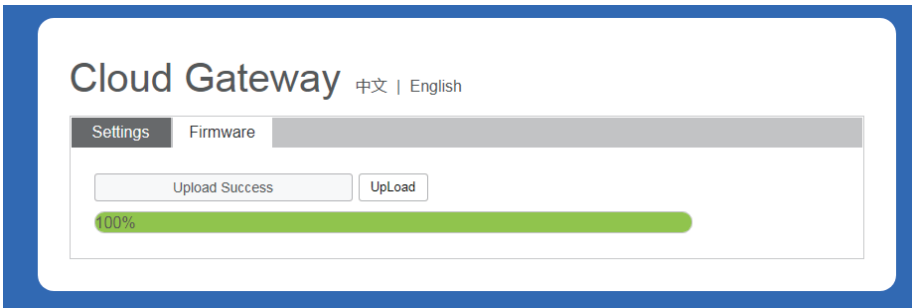

## 2.2.2 Restore Factory Settings

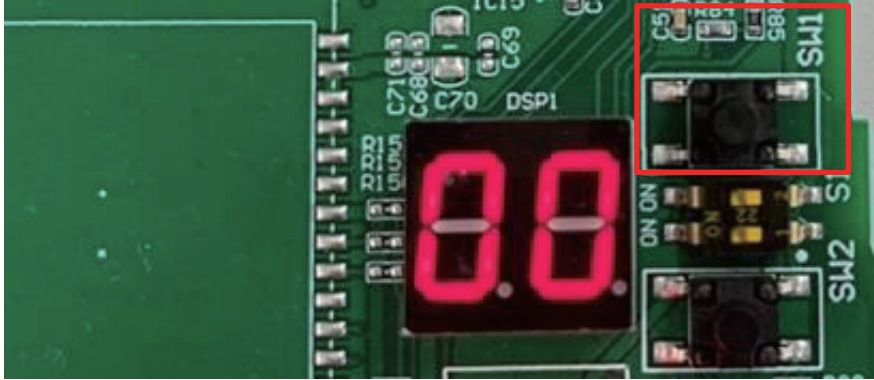

	SW1	SW2
Function	Restore Factory Configuration	Reserved

When the factory configuration is restored, the gateway IP address, and server parameters are set to factory setting values.

Steps:

1. Power off the Gateway, press and hold SW1 and turn on the power of Gateway;
2. Keep holding SW1 until the digital display shows "LL" and release SW1; when the digital display shows "FF", the Gateway has been restored to factory configuration and automatically reset and restarted.

## 2.2.3 Emergency Stop

In the event of a short circuit connection of DI1 and M, the Gateway will start the emergency shutdown function.

Logic description of emergency stop: The Gateway uses continuous polling (\*4) to obtain the information of the connected device. During the effective period of the emergency stop function, the Gateway determines that the IDU is locked in on the state according to the polling information, and will unlock the locked-on attribute of the corresponding IDU.


If the IDU is on, the Gateway sends a shutdown command until the Gateway exits the emergency stop function (\*5).

\*4: The interval of Gateway polling depends on the number of devices connected, and usually takes five minutes to complete.

\*5: Exiting the emergency stop will not restore the IDU's locked-on status, namely, the IDU which was originally locked on becomes unlocked.


# 3 Installation Instructions

## 3.1 Product Introduction

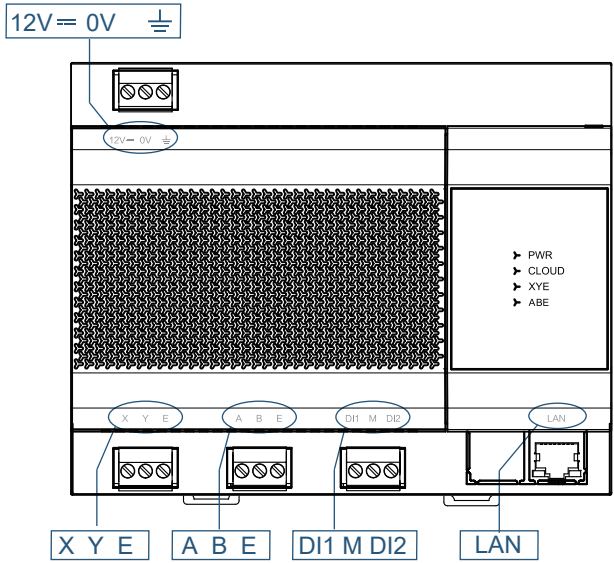

## 3.2 Product Dimensions

Unit: mm

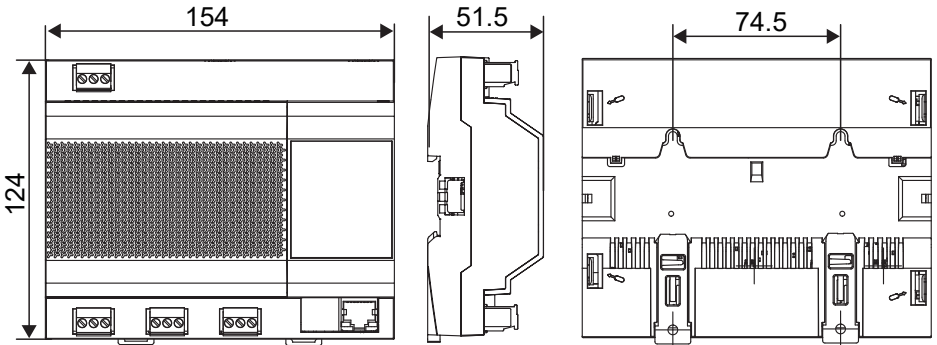


### 3.3 Installation Accessories

Please check that you have all the following parts.


No.	Name	Quantity	Remarks
1	Self-tapping screw	4	ST4* 20
2	Plastic expansion pipe	4	For use in installing the controller onto the wall
3	3 pin black terminal	3	For communication
4	3 pin gray ter., adapter	1	For connecting the power supp. in package is adapter

### 3.4 Installation Method


#### 3.4.1. Installing the Guide Rail

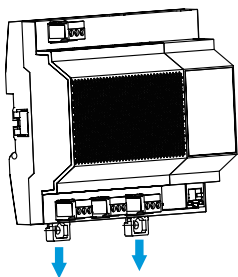

Pull open the handle buckle

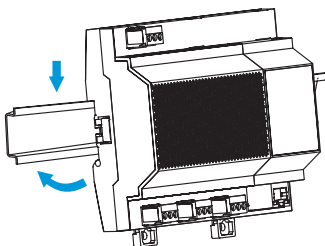


Snap fit the product on the guide rail

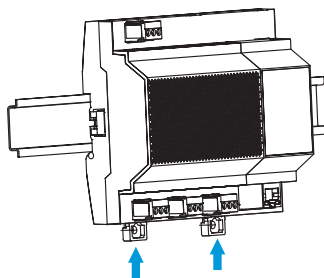


Close the handle buckle

#### 3.4.2. Mounting the Device on the Wall

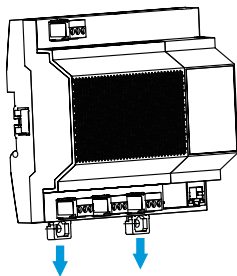

Pull open the handle buckle

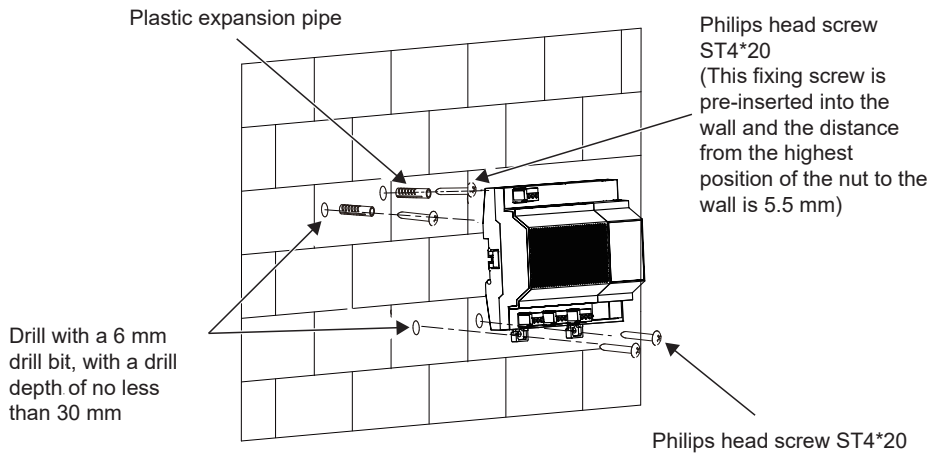

## NOTE CONCERNING PROTECTION OF ENVIRONMENT



This product must not be disposed of via normal household waste after its service life, but must be taken to a collection station for the recycling of electrical and electronic devices. The symbol on the product, the operating instructions or the packaging indicate such disposal procedures. The materials are recyclable in accordance with their respective symbols. By means of re-use, material recycling or any other form of recycling old appliances you are making an important contribution to the protection of our environment. Please ask your local council where your nearest disposal station is located.

In case of quality problem or other please contact your local supplier or authorized service center.

**Emergency number: 112**

### PRODUCER

SINCLAIR CORPORATION Ltd.  
16 Great Queen Street  
WC2B 5AH London  
United Kingdom  
[www.sinclair-world.com](http://www.sinclair-world.com)

This product was manufactured in China (Made in China).

### REPRESENTATIVE

SINCLAIR Global Group s.r.o.  
Purkynova 45  
612 00 Brno  
Czech Republic

### TECHNICAL SUPPORT

SINCLAIR Global Group s.r.o.  
Purkynova 45  
612 00 Brno  
Czech Republic  
Tel.: +420 800 100 285 | Fax: +420 541 590 124  
[www.sinclair-solutions.com](http://www.sinclair-solutions.com) | [info@sinclair-solutions.com](mailto:info@sinclair-solutions.com)

